

# Addendum

# Fans

## 2006 Cheetah



The information printed here reflects product design, fabrication, and component parts at the date of printing. The manufacturer reserves the right, at any time, to make changes in product design or material or component specifications as its sole option, without notice. This includes the substitution of components of a different brand or trade name, which will result in comparable performance. All information printed in this document is subject to change after the date of printing. Due to product improvements, changes during the model year and/or transcription errors that may occur, information represented within the owner's manual and/or this document may not be accurate at the time of your purchase. Please confirm any information with your dealer.

© Monaco Coach Corporation. All rights reserved. Safari® is a registered trademark of Monaco Coach Corporation. All other trademarks or registered trademarks are property of their respective holders. Brand name products of other companies mentioned in this addendum are not endorsed by Monaco Coach Corporation.

The following information supersedes the information published in the 2006 Cheetah Owner's Manual, **Section 5 – Equipment** on page 146.


## FANS *Automatic*

### Fan Operation:

- Turn on the battery cut-off switch.
- Ensure the vent cover knob on the fan is pressed **IN** to the Automatic position.
- Use the wall switch to raise the vent cover. The vent cover must be open at least 2" before the fan will run.
- Turn power knob clockwise to turn fan on. The power knob also adjusts fan speed.

### **NOTE:**

**To override the automatic setting, pull the vent cover knob out to the manual position and close vent. The fan blade will stop spinning when the vent cover is closed.**

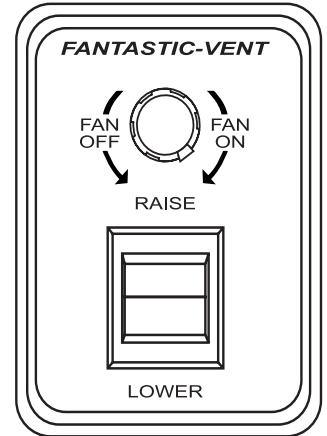


031205b

## *Automatic w/Electronic Thermostat (Optional)*

### Fan Operation:

- Turn on the battery cut-off switch.
- Ensure the vent cover knob is pressed **IN** to the Automatic position.
- Press the **Auto/Manual/Off** button on the wall switch once. The vent cover will automatically open .
- Use the up or down arrows to set the thermostat temperature. Fan speed will automatically adjust according to the disparity between ambient and selected temperatures.
- Press the **Auto/Manual/Off** button once more to manually control fan speed. Fan speed is displayed on the wall control in 10% increments. The thermostat is not operational in this mode.
- Press the **Auto/Manual/Off** button until all wall control lights are off. The fan blade will stop spinning and the vent dome will automatically close.
- To use the fan as a vent only: leave the wall control switch off, pull the vent cover knob down to the manual position and turn knob to open vent.

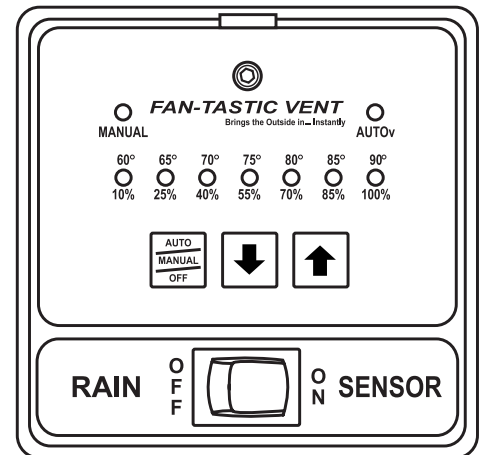

031205

### **NOTE:**

**To override the automatic setting, pull the vent cover knob out to the manual position and close vent. The fan blade will stop spinning when the vent cover is closed.**

### **Rain Sensor Operation:**

- Ensure the rain sensor switch on the wall control is set to on.
- If the built in rain sensor gets wet the dome will automatically close and the fan will shut off.
- After the sensor dries, the dome will reopen and the fan will start.
- To avoid automatic restart, turn the fan off at the wall control.

---

### ***Tips***

- To keep condensation from accumulating open the vent fan lids slightly to help the air circulate. Condensation occurs naturally from fluctuations in interior and exterior temperatures, humidity and dew point changes, steam from cooking, or boiling large amounts of water on the cooktop. Shower usage also produces condensation.
- If the fan fails to operate, check for either a blown fuse in the domestic fuse panel or the 6 Amp fuse on the fan.
- To clean the screen, remove the eight screws holding it in place. Wash the screen using a non-abrasive soap and water. Re-install the screen and tighten the screws.
- Keep all the vents closed when using the Fantastic Fan Vent. Direct the airflow by slightly opening the window(s) on the shaded side of the motorhome to obtain the maximum airflow, especially on hot, sunny days. Close all the roof vents. The area between the open window(s) and the Fantastic Vent supplies the maximum airflow and providing the most comfort.

### **NOTE:**

**DO NOT leave the vent cover open while the motorhome is stored or unattended for extended periods. High winds, other unusual conditions or obstructions may prevent closing. The resulting leakage could cause serious damage.**



**MONACO®**

**Monaco Coach Corporation**

91320 Coburg Industrial Way

Coburg, OR 97408

800-634-0855

[www.monaco-online.com](http://www.monaco-online.com)

**Warranty/Technical Support**

Toll Free 877-466-6226

