

## GENERAL CHASSIS MAINTENANCE SCHEDULE

Before Each Trip	Weekly	Monthly	Quarterly	Semi-Annually	Annually	Every 2 Years	
✓							General Inspection – This is a visual walk-around inspection. Check both the interior and exterior of the motorhome.
✓							Engine Oil Level – Visual inspection. Keep at full mark on dipstick.
✓							Engine Coolant Level – Inspect coolant reservoir. Keep at full mark.
✓							Serpentine Belt and A/C Belts – Inspect for proper tightness and ensure no cracks, frays or abnormal wear. <b>Keep fingers away from belts and rotating components. Turn rear start box off.</b>
✓							Transmission Fluid Level – Visual inspection. Keep at full on dipstick.
✓							Tire pressure – Inspect tires for proper inflation pressures.
✓							Tag Axle and Oil Bath Hubs – Inspect fluid level (a clear cover). Keep to full mark, before each trip
		✓					Batteries – Inspect the distilled water level of Lead-Acid batteries.
		✓					Check the battery terminal connections – Tight and free of corrosion.
			✓				Apply a thin coat of grease to battery terminal connections.
							Engine Oil Filter – Replace. Refer to engine OEM.
							Transmission Filter – Replace. Refer to Allison Manual.
							Fuel Filters (secondary) – Changed at every Oil Change interval. Refer to Cummins Manual.
				✓			Fuel Water Separator (Primary) - Change every 6 months or 15,000 miles. Secondary: Refer to OEM.
				✓			Steering Column – Grease fittings at U-joints.
				✓			Steering Gear – Grease using hand grease gun only.

**NOTES:** \_\_\_\_\_

Before Each Trip	Weekly	Monthly	Quarterly	Semi-Annually	Annually	Every 2 Years	GENERAL CHASSIS MAINTENANCE SCHEDULE
				✓			King Pins/ Knuckles & Steer axle – Grease using a High quality multipurpose lithium soap base lubricant Designed to withstand high temperatures. Semi-Annually or every 5,000 miles.
					✓		Drive Shaft Universal Joints – Grease using a high Quality, multi-purpose lithium soap pressure gun Lubricant designed to withstand high temperatures. Annually or every 10,000 miles.
					✓		Drive Shaft Slip Yoke and Splines – Grease using a High quality multi-purpose lithium soap pressure gun Lubricant designed to withstand high temperatures. Annually or every 10,000 miles.
				✓			Drag Link and Center Link - Grease using a High quality multi-purpose lithium soap pressure gun Lubricant designed to withstand high temperatures. Semiannually or every 5,000 miles.
				✓			Disc Brake calipers and slack adjusters – Grease And adjust. Semiannually or every 10,000 miles.
			✓				Air Filter Minder – Inspect Air Filter indicator restriction.
		✓					Air Tanks – Drain Air Tanks.
				✓			Engine Coolant Filter – Replace Filter. Refer to Cummins manual.
						✓	Engine Coolant System – Drain and Flush.
			✓				Power Steering/Hydraulic Fans Reservoir – Check Oil level. Keep at full mark. Quarterly or every 6,000 Miles.
					✓		Power Steering Reservoir Filter – Change cellulose Filter. Annually or 15,000 miles.
					✓		Wheel Bearing – Requires cleaning an packing. Generally front axle only. Annually or every 30,000 miles
					✓		Tag Axle and Oil Bath Hubs – Drain and change oil Using S.A.E. 80w/90 gear oil. Annually or every 30,000 miles.
					✓		Drive Axle Oil Level and Housing Breather – Inspect The lubricant oil level with fill port. Breather clean And free of dirt.
							Drive Axle Oil – Change oil every 3 years or 250,000 Miles.

NOTES: \_\_\_\_\_

